


ROLEX OYSTER WITH DATE FUNCTION

To change the time or date, or to wind the watch by hand, you must first unscrew the crown from the case, then pull it until the required position is reached. Always perform these operations with the watch in your hand and not on your wrist. When you are done, make sure the crown is screwed down to the case again before you wear it.

Position 0

Wearing position

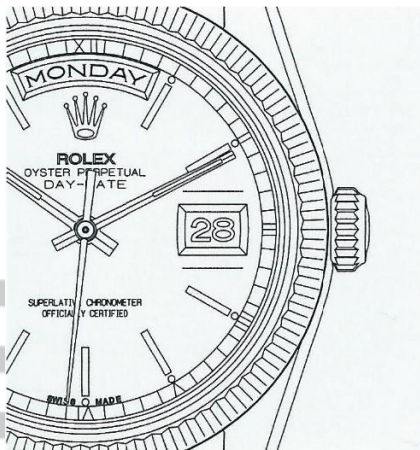


Crown fully screwed -down:

Only wear the watch when the crown is fully screwed down to the case for it to be water and dustproof. (although we would recommend to prevent any contact with water. We do not guarantee that the watch is waterproof.

Position 1

Hand winding position

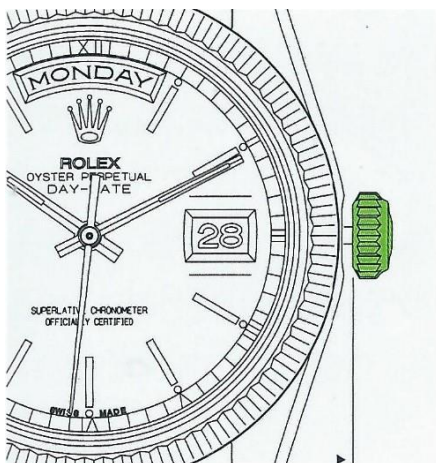


Unscrew the winding crown (downwards) till it is disengaged from the screw thread:

For manually wound watches this position is used to wind the watch by hand before you wear it. (Don't wind it while on the wrist!) To ensure long power reserve (one full day) make sure you wind the crown upwards fully till the crown can't go any further. This position can also be used for automatic watches to give it a boost of extra power, for example when the watch hasn't been worn for some time.

Position 2

Setting time position

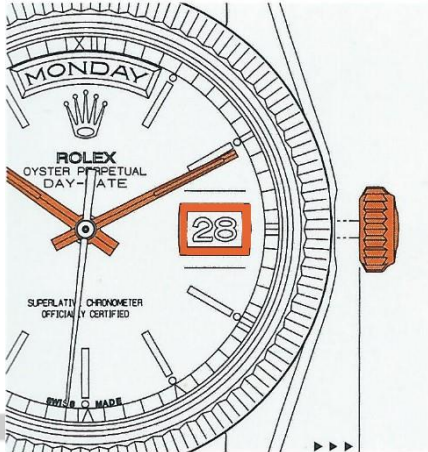

Pull out crown after it is unscrewed:

After unscrewing the crown to 'position 1', it can be pulled out. When this is done you can set the time by turning the crown in both directions.

Upwards / clockwise: time goes forward.

Downwards / Counter clockwise: time goes backwards.

To change the date on the watch, simply keep turning the crown upwards until the correct date is displayed. Bear in mind to set the time correctly to AM or PM (the date changes at 12 o'clock PM).

LINKS
WATCH CENTRE