


ROLEX OYSTER WITH QUICKSET DATE

When adjusting the time, date, or manually winding your watch, it is essential to first unscrew the crown from the case. Once unscrewed, gently pull the crown to the required position for setting the time or date, or simply turn it to wind the watch if needed. Always perform these operations with the watch held in your hand, not while wearing it on your wrist, to avoid potential damage to the crown or case. After making the adjustments or winding, remember to securely screw the crown back down to the case to ensure the watch's water resistance is maintained.

Position 0

Wearing position

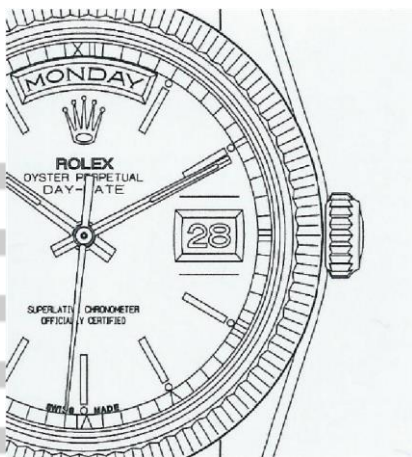


Crown fully screwed -down:

Only wear the watch when the crown is fully screwed down to the case for it to be water and dustproof. (although we would recommend to prevent any contact with water We do not guarantee that the watch is waterproof)

Position 1

Hand winding position

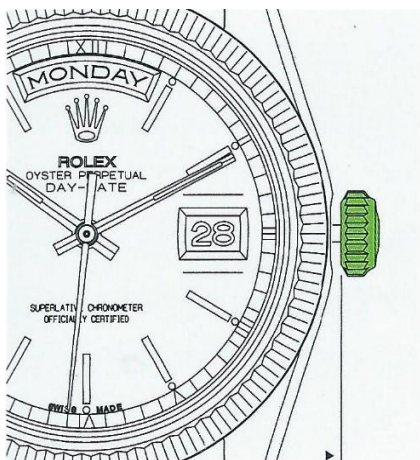


Unscrew the winding crown (downwards) till it is disengaged from the screw thread:

For manually wound watches this position is used to wind the watch by hand before you wear it. (Don't wind it while on the wrist!) To ensure long power reserve (one full day) make sure you wind the crown upwards fully till the crown can't go any further. This position can also be used for automatic watches to give it a boost of extra power, for example when the watch hasn't been worn for some time.

Position 2

Setting date position

 
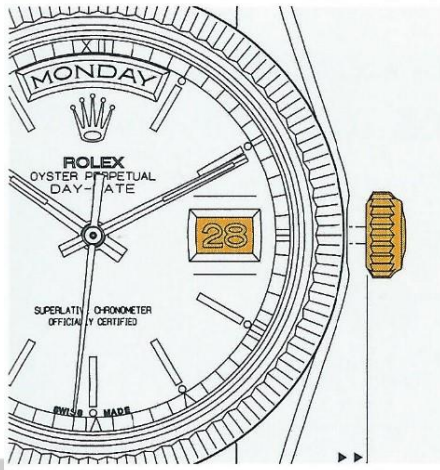


Pull out crown after it is unscrewed:

After unscrewing the crown to 'position 1', the crown can be pulled out. When this is done you can set the date by turning the crown upwards. Proceed to do this until one day before the correct date. It is best to set this last day by turning the time forwards (which is explained in the next step 'position 3') This is so AM and PM are set correctly.

Position 3

Setting time position

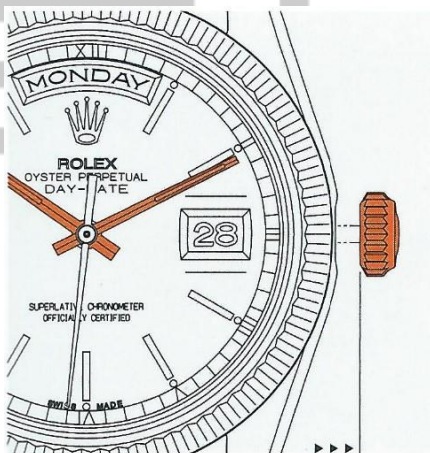

Pull out crown all the way:

Pull out the crown to the last notch. When this is done you can set the time by turning the crown in both directions. Upwards / clockwise: time goes forward. Downwards / counter clockwise: time goes backwards. Bear in mind to set the time correctly to AM or PM (the date changes at 12 o'clock PM).