

Operating Instructions for Hand-Winding Watches (With and Without Date)

For Watches Without Date or With Date (Without Quickset):

1. Normal Position (Wearing Position):

- **Winding the Watch:** Use the crown to wind the watch by turning it forwards until you feel resistance. Do not overwind. Winding once daily is sufficient for proper functioning.
- **Water Resistance:** The crown positioned against the case helps maintain water resistance. However, the watch is not guaranteed to be waterproof or water-resistant.
- **Handling the Crown:** Always handle the crown with the watch in your hand, not on your wrist, to avoid damaging the crown tube or the case.

2. Pulled Out Position (Time and Date Setting):

- **Setting the Time and Date:** Pull out the crown to set the time. Turn the crown in both directions. For setting the date, continue turning the crown forwards (clockwise) until you reach the desired date.

For Watches With Date (Quickset Feature):

1. Normal Position (Wearing Position):

- Follow the same winding and water resistance precautions as mentioned above.

2. Pulled Out Once Position (Date Setting):

- **Setting the Date:** Turn the crown upwards to change the date. Ensure the time is set around 6 o'clock before using the quickset function. This prevents damage to the mechanism, as the watch changes the date mechanically around midnight.

3. Pulled Out Twice Position (Time Setting):

- Use this position to set the time. The crown can be turned in both directions for adjustment.

General Guidance:

- Handle your watch with care, especially when setting the time and date, to preserve its integrity and functionality. If in doubt, seek professional advice or refer to the manufacturer's instructions.