 


## ROLEX OYSTER DAY-DATE, NO QUICKSET

To change the time or date, or to wind the watch by hand, you must first unscrew the crown from the case, then pull it until the required position is reached. Always perform these operations with the watch in your hand and not on your wrist. When you are done, make sure the crown is screwed down to the case again before you wear it.

Position 0

Wearing position

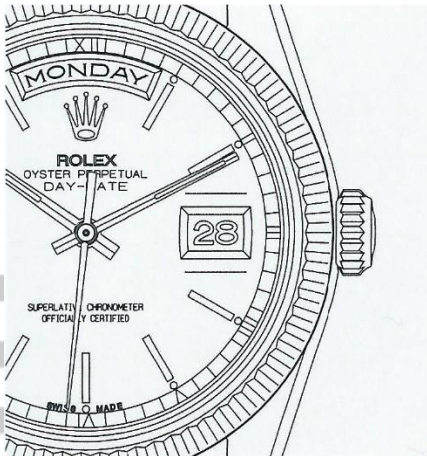 


Crown fully screwed -down:

Only wear the watch when the crown is fully screwed down to the case for it to be water and dustproof. (although we would recommend to prevent any contact with water. We do not guarantee that the watch is waterproof.

Position 1

Hand winding position

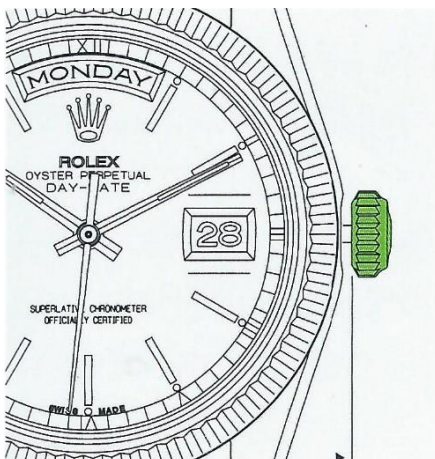 


Unscrew the winding crown (downwards) till it is disengaged from the screw thread:

For manually wound watches this position is used to wind the watch by hand before you wear it. (Don't wind it while on the wrist!) To ensure long power reserve (one full day) make sure you wind the crown upwards fully till the crown can't go any further. This position can also be used for automatic watches to give it a boost of extra power, for example when the watch hasn't been worn for some time.

## Position 2

## Setting time, date & day position

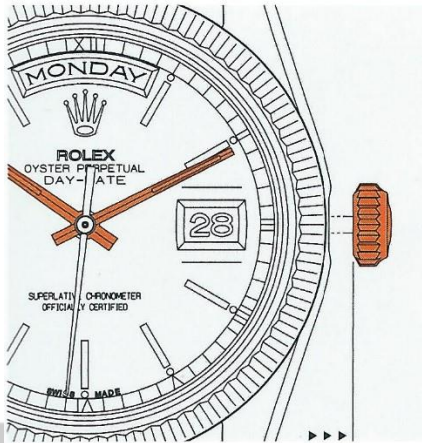

Pull out crown after it is unscrewed:

After unscrewing the crown to 'position 1', the crown can be pulled out. When this is done it can be used to set the time by turning the crown in both directions. Upwards/ clockwise: time goes forward. Downwards/ counter clockwise: time goes backwards. If you turn the crown upwards, the day and date will change every 24 hours. Turn the crown downwards/ counter clockwise 24 hours, in order for the day to go one day back. This way the day can be set separately.

LINKS  
WATCH CENTRE