

Operating Instructions for Automatic Watches

For Watches Without a Date or With a Date (Without Quickset Feature):

1. Normal Position (Wearing Position):

- **Winding the Watch:** In this position, you can wind the watch using the crown. Wind it with about 10 to 15 turns if the watch has stopped after not being worn for a while. Regular wear or keeping the watch on a watchwinder negates the need for manual winding.
- **Water Resistance Caution:** The crown should be positioned against the case to maintain water resistance. However, note that we do not guarantee the watch to be waterproof or water resistant.
- **Handling the Crown:** Always handle the crown while the watch is in your hand, not on your wrist, to avoid bending or damaging the crown tube and the case.

2. Pulled Out Position (Time and Date Setting):

- **Setting the Time and Date:** Pull out the crown to set the time. The crown can be turned in both directions. For watches with a date, continue turning the crown forwards (clockwise) to adjust the date.

For Watches With a Date (Quickset Feature):

1. Normal Position (Wearing Position):

- The same winding and water resistance precautions as above apply.

2. Pulled Out Once Position (Date Setting):

- **Setting the Date:** Turn the crown upwards to change the date. Ensure the time is set around 6 o'clock before using this function to prevent damage to the mechanism, as the watch mechanically changes the date around midnight.

3. Pulled Out Twice Position (Time Setting):

- Similar to the above, use this position to set the time, with the crown capable of turning in both directions.

General Note:

- It's crucial to handle your watch carefully, particularly when setting the time and date, to maintain its integrity and functionality. If unsure, consult with a professional watchmaker or the store for assistance.