


## ROLEX OYSTER DAY-DATE, QUICKSET

To change the time or date, or to wind the watch by hand, you must first unscrew the crown from the case, then pull it until the required position is reached. Always perform these operations with the watch in your hand and not on your wrist. When you are done, make sure the crown is screwed down to the case again before you wear it.

Position 0

Wearing position

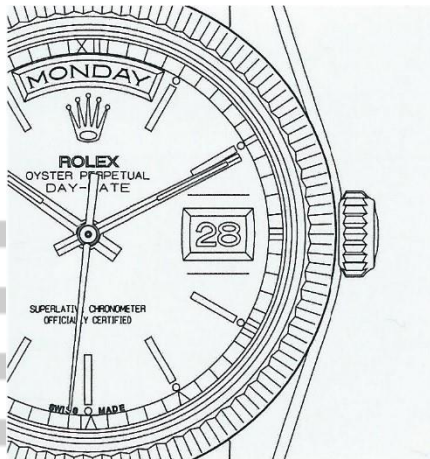


Crown fully screwed -down:

Only wear the watch when the crown is fully screwed down to the case for it to be water and dustproof. (although we would recommend to prevent any contact with water. We do not guarantee that the watch is waterproof.

Position 1


Hand winding position

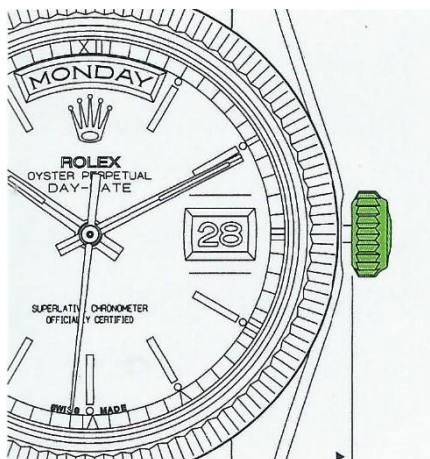

Unscrew the winding crown (downwards) till it is disengaged from the screw thread: For manually wound watches this position is used to wind the watch by hand before you wear it. (Don't wind it while on the wrist!) To ensure long power reserve (one full day) make sure you wind the crown upwards fully till the crown can't go any further. This position can also be used for automatic watches to give it a boost of extra power, for example when the watch hasn't been worn for some time.

### Position 2

### Setting date & day position

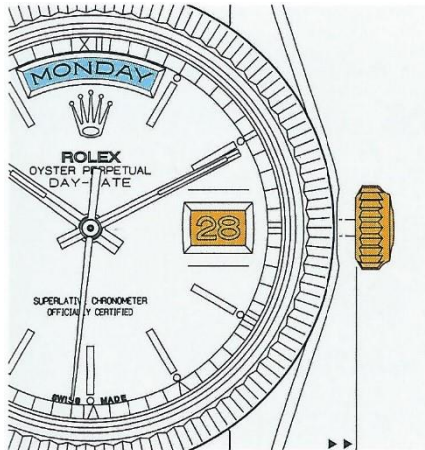

Pull out crown after it is unscrewed:

After unscrewing the crown to 'position 1' the crown can be pulled out. When this is done the date can be set by turning the crown upwards (clockwise) and the day by turning it downwards (counter clockwise). Proceed to do this until the day before the correct day and date. It is best to set this last day by turning the time forwards (which is explained in the next step 'position 3') This is so AM and PM are set correctly

### Position 3

### Setting time position



Pull out crown all the way:

Pull out the crown to the last notch. When this is done you can set the time by turning the crown in both directions. Upwards/ clockwise: time goes forward. Downwards / counter clockwise time goes backwards. Bear in mind to set the time correctly to AM or PM (the date changes at 12 o'clock PM).